

4.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CASE IH GAUGE WHEEL ARM		1
2	K1015	SPRING WASHER	1
3	K1019	ADJUSTING WASHER	16
4	K1541	TAB WASHER	1
5	AK1156	ADJUSTING NUT ASSY	1
6	K2005	PIVOT SHAFT	1

5.

6.




7.

8.

9.

10.

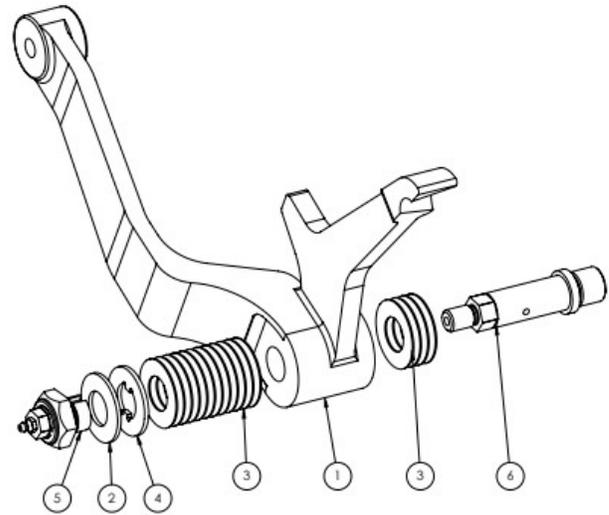

Special Notes:

tD Locknut size is 1 7/16" across flats. Many 12" adjustable wrenches will open to 1 7/16" but yours may not. If not, it is a simple matter to remove the required material from the stationary jaw of the wrench using a bench grinder.

yw In most cases the gauge wheel tire will rub the opener disk at the ground line (or at least have a very small gap) without excessive pressure between the tire and disk at some other point. If this is accomplished, moist dirt will be cleaned from the opener disk as the disk emerges from the ground. In this case the disk scrapers serve no purpose and can be removed.