


# Copperhead Concave Systems


## Coverplate Installation

1. Attach the "U" bolts to the coverplate using 2 - 13mm lock nuts, finger tight is fine for now.
2. Attach the latch plates to the concaves in the first, second and third positions, using the 10mm bolts(3rd plate may be left off if only harvesting corn and soybeans)
3. Attach handles to the latch plate using 13mm bolt and nut. Tighten to snug, but leave room for the handle to move freely.
4. Hook the coverplate over the last bar on the opposite side of the concave and close the latch over the "U" bolt on the near side. Tighten the 13mm nuts down on the "U" bolt until the cover is tight, but still allows the latch to pivot out. Insert the pin through the handle plate and close the safety latch.

Note: The nuts on the coverplate slides are 1/2".

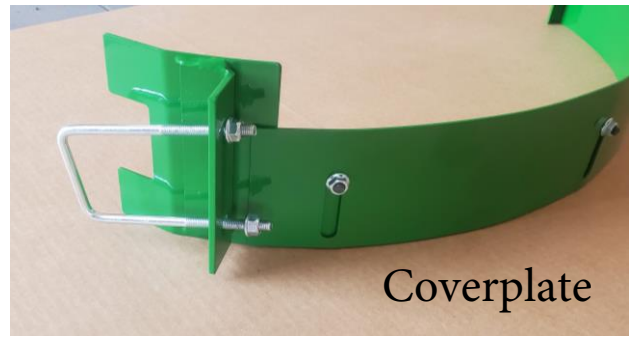

Coverplate

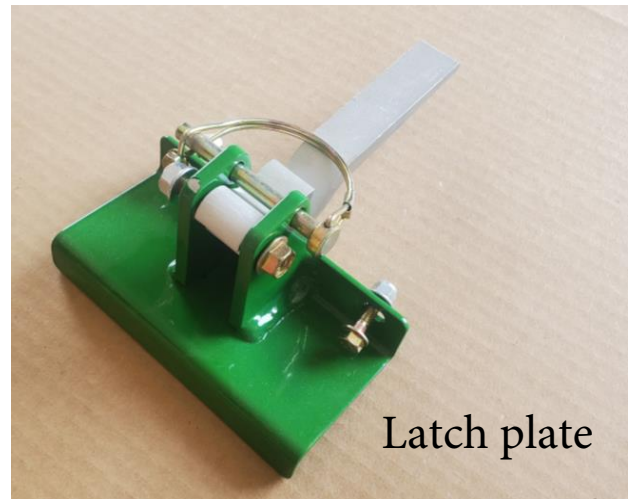

Latch plate

